Fig. 16 SEPARATOR AREA (FR3950)

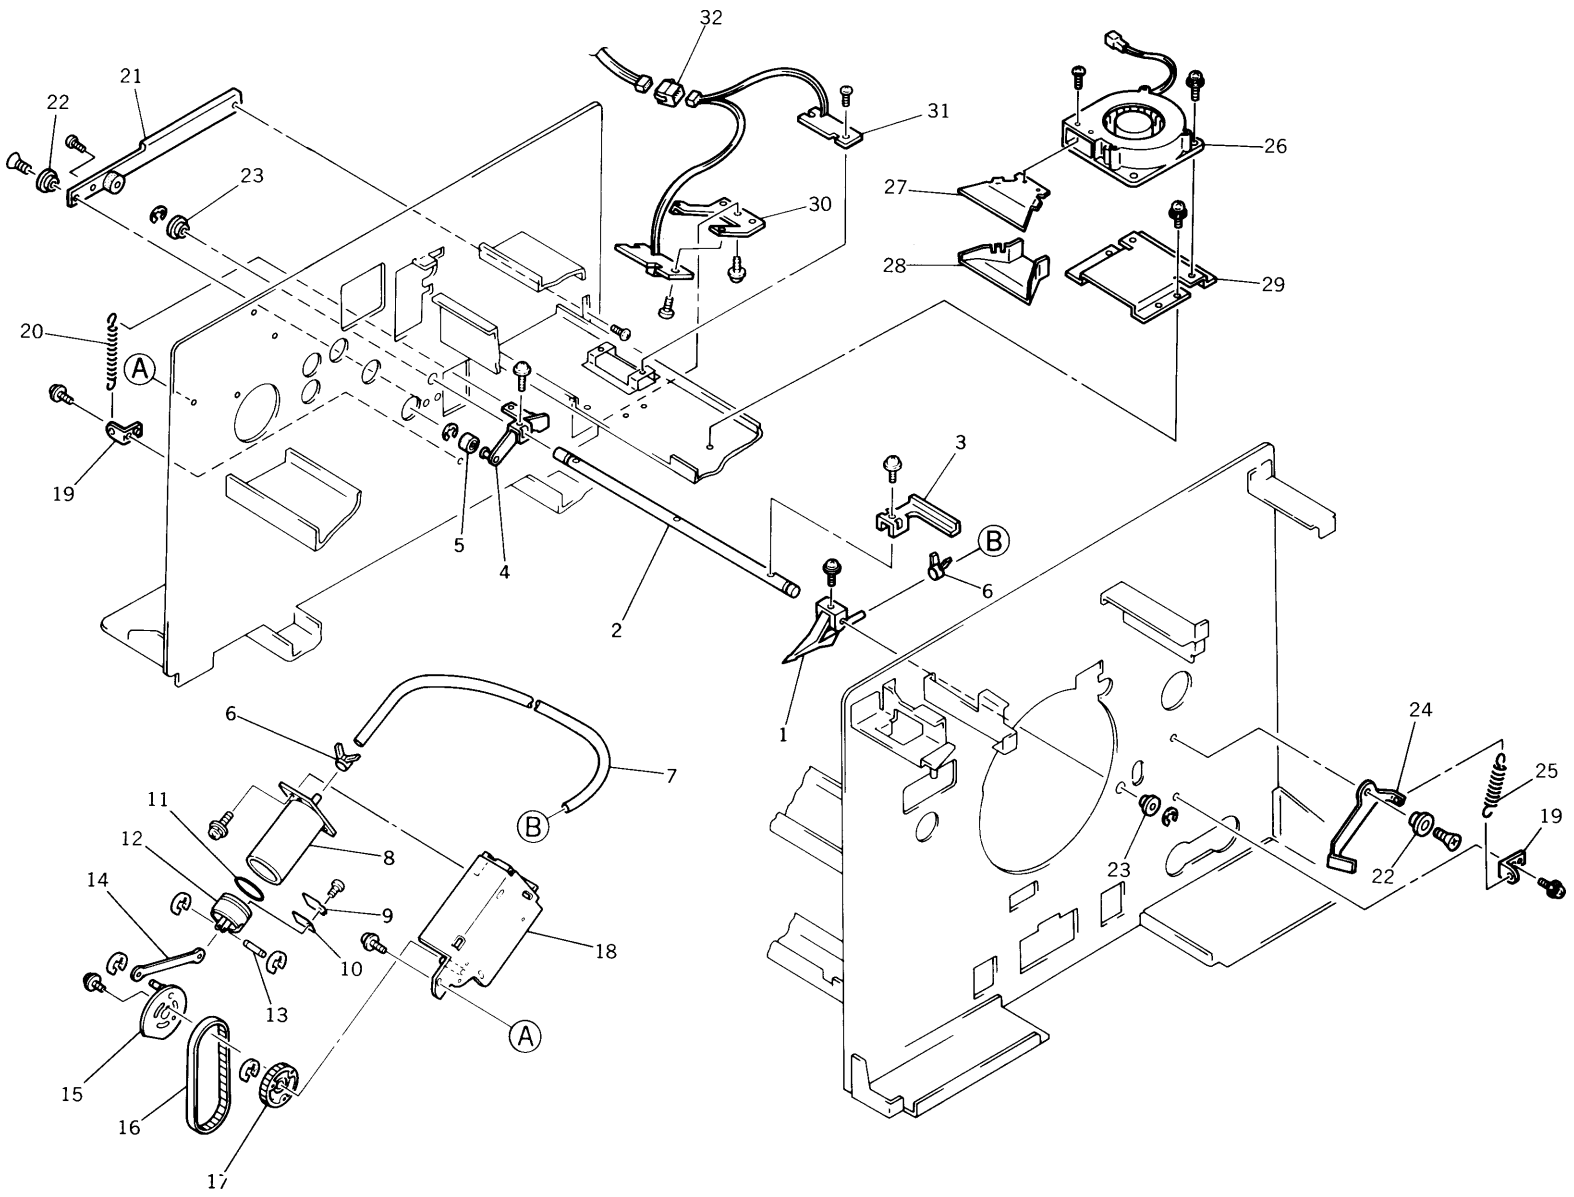

Fig. 16 Separator Area (FR3950)

No.	Part No.	Part Name	Q'ty	Remark
	019-93300-108	Separator Ass'y; A3; CE		
1	019-13301-109	*Separator II	1	
2	019-23301-107	*Shaft; Separator II; A3; CE	1	
3	011-13311-106	*Release Lever	1	
4	011-13301-208	*Lever; Separator	1	
5	000-01515-004	*Collar; Separator	1	
6	665-02901-002	*Power Band T10	1	
7	019-13514-005	*Air Hose; Separator	1	
6	665-02901-002	Power Band T10	1	
	019-93320-109	Air Pump Ass'y		
8	019-13501-000	*Cylinder; Air Pump	1	
9	019-13517-004	*Cylinder Valve II; Air Pump	1	
10	019-13518-000	*Cylinder Valve Sheet; Air Pump	1	
11	640-67340-009	*O Ring; 34-3.6	1	
12	019-13516-105	*Piston Head II; Air Pump	1	
13	019-13512-002	*Arm Shaft; Air Pump	1	
14	019-13511-103	*Arm; Air Pump	1	
15	019-13504-000	*Cam Plate; Air Pump	1	
16	620-73758-004	*Belt; 375-5GT-8	1	
17	019-13503-003	*Cam Pulley; Air Pump	1	
18	019-13507-106	*Bracket; Air Pump	1	
19	011-13310-002	Hook Plate	2	
20	002-13352-202	Spring; Separator	1	
21	011-13307-206	Adj. Stopper; Separator	1	
22	011-13306-005	Collar A; Separator	2	
23	607-15000-000	Metal; F8 x 13/12 x 5; 16 x 2	1	
24	017-13301-007	Release Lever; Separator	1	
25	007-13121-100	Spring; Release Lever	1	
	019-93310-006	Separation Fan Ass'y		
26	019-65006-008	*Separation Fan	1	
27	014-13311-108	*Nozzle (Upper); Separation	1	
28	014-13310-004	*Nozzle (Lower); Separation	1	
29	014-13312-007	Bracket; Separation Fan	1	
	019-93201-207	Paper Receiving Sensor IV (Receive) Ass'y		
30	017-23314-000	*Bracket II; P. -Rcv. Sensor II (Receive)	1	

No.	Part No.	Part Name	Q'ty	Remark
31	019-60013-200	*Paper Receiving Sensor IV (Receive)	1	
32		**Junction Connector; 6P	1	Ref.Pg.II-36